

Radio System Plus (RMC) with Audi Sound

From January 2011



Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

erWin

Multimedia System Control Head, Information Electronics Control Module 1

- E380 Multimedia System Control Head
- J533 Data Bus on Board Diagnostic Interface
- J794 Information Electronics Control Module 1
- SF1 Fuse 1 (On Fuse Panel F)
- ST1 Fuse Panel 1
- ST3 Fuse Panel 3
- SC4 Fuse 4 (On Fuse Panel C)
- T8f 8-Pin Connector
- T12c 12-Pin Connector
- T12d 12-Pin Connector
- T17o 17-Pin Connector, In the Coupling Point in the Right Interior
- T20b 20-Pin Connector
- T32b 32-Pin Connector

- 372 Ground Connection 7 (in Main Wiring Harness)
- 687 Ground Connection 1 on Center Tunnel
- B318 Positive Connection 4 (30a) (in Main Wiring Harness)
- B444 OBD Connection 1 (in Main Wiring Harness)

* Refer to Applicable Wiring Diagram for Fuse Positions
*2 Prompt Wire




Audi

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

erWin

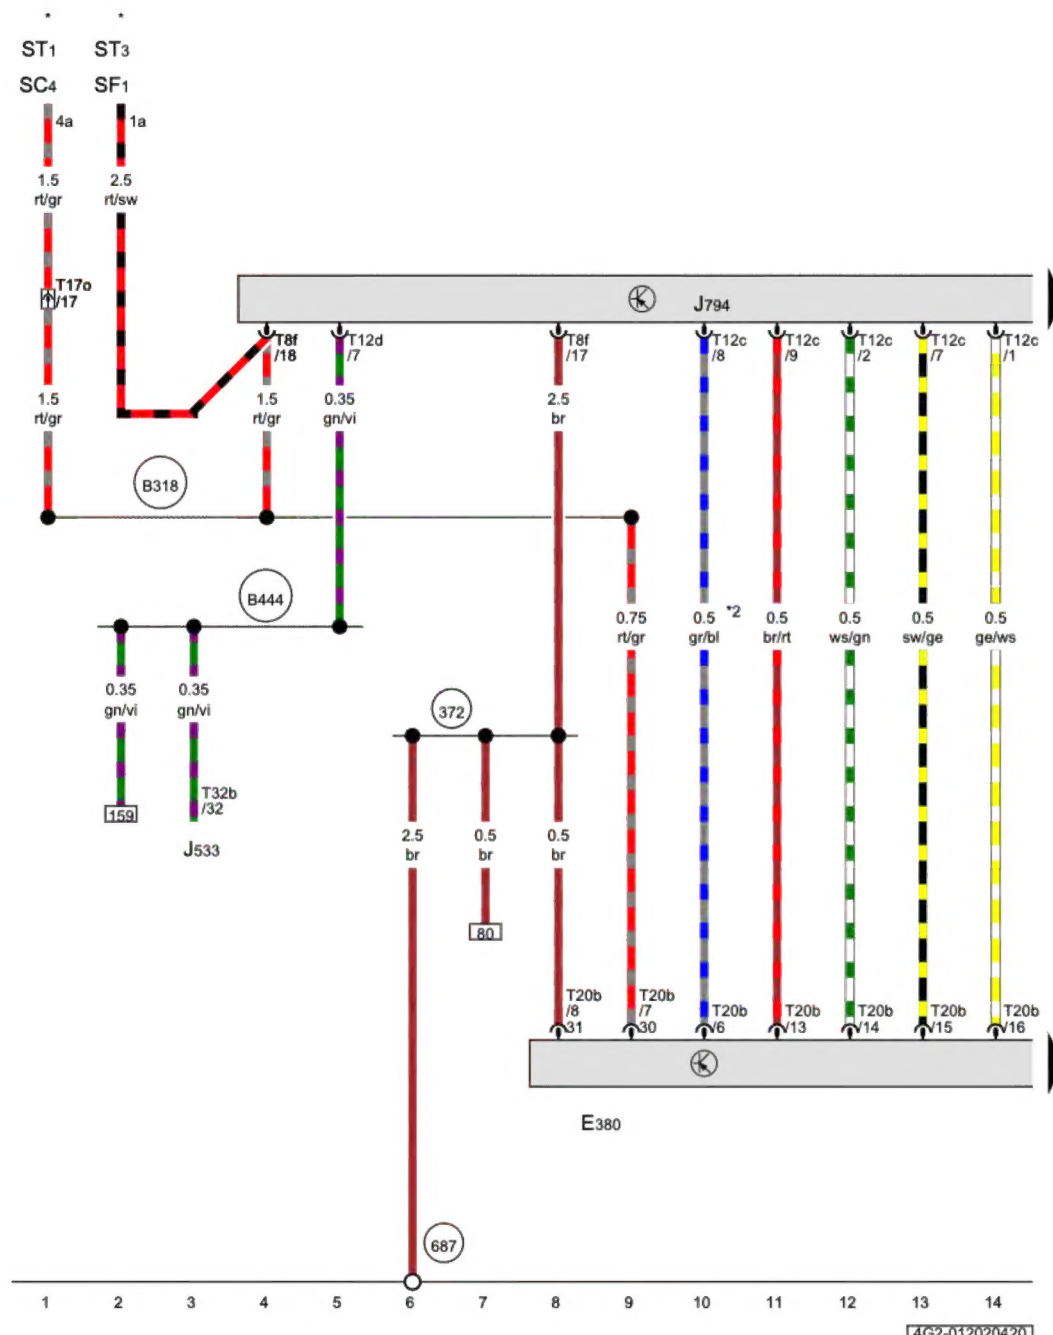

Multimedia System Control Head, Display Unit Button, Display -Open- Stop Switch, Instrument Cluster Control Module, Information Electronics Control Module 1, Display Opening/Closing Motor

- E380 Multimedia System Control Head
- E506 Display Unit Button
- F330 Display -Open- Stop Switch
- F331 Display -Closed- Stop Switch
- J285 Instrument Cluster Control Module
- J519 Vehicle Electrical System Control Module
- J794 Information Electronics Control Module 1
- T6q 6-Pin Connector
- T8o 8-Pin Connector
- T8p 8-Pin Connector, Behind the Left Front Center Console
- T17h 17-Pin Connector, In the Left A-Pillar Connector Station
- T20b 20-Pin Connector
- T32 32-Pin Connector
- T32c 32-Pin Connector
- V301 Display Opening/Closing Motor

45 Ground Connection Behind Instrument Panel, Center

199 Ground Connection 3 (in Instrument Panel Wiring Harness)


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

373 Ground Connection 8 (in Main Wiring Harness)

687 Ground Connection 1 on Center Tunnel


A175 Connection 58s (in Instrument Panel Wiring Harness)

* For Vehicles with Cell Phone Preparation

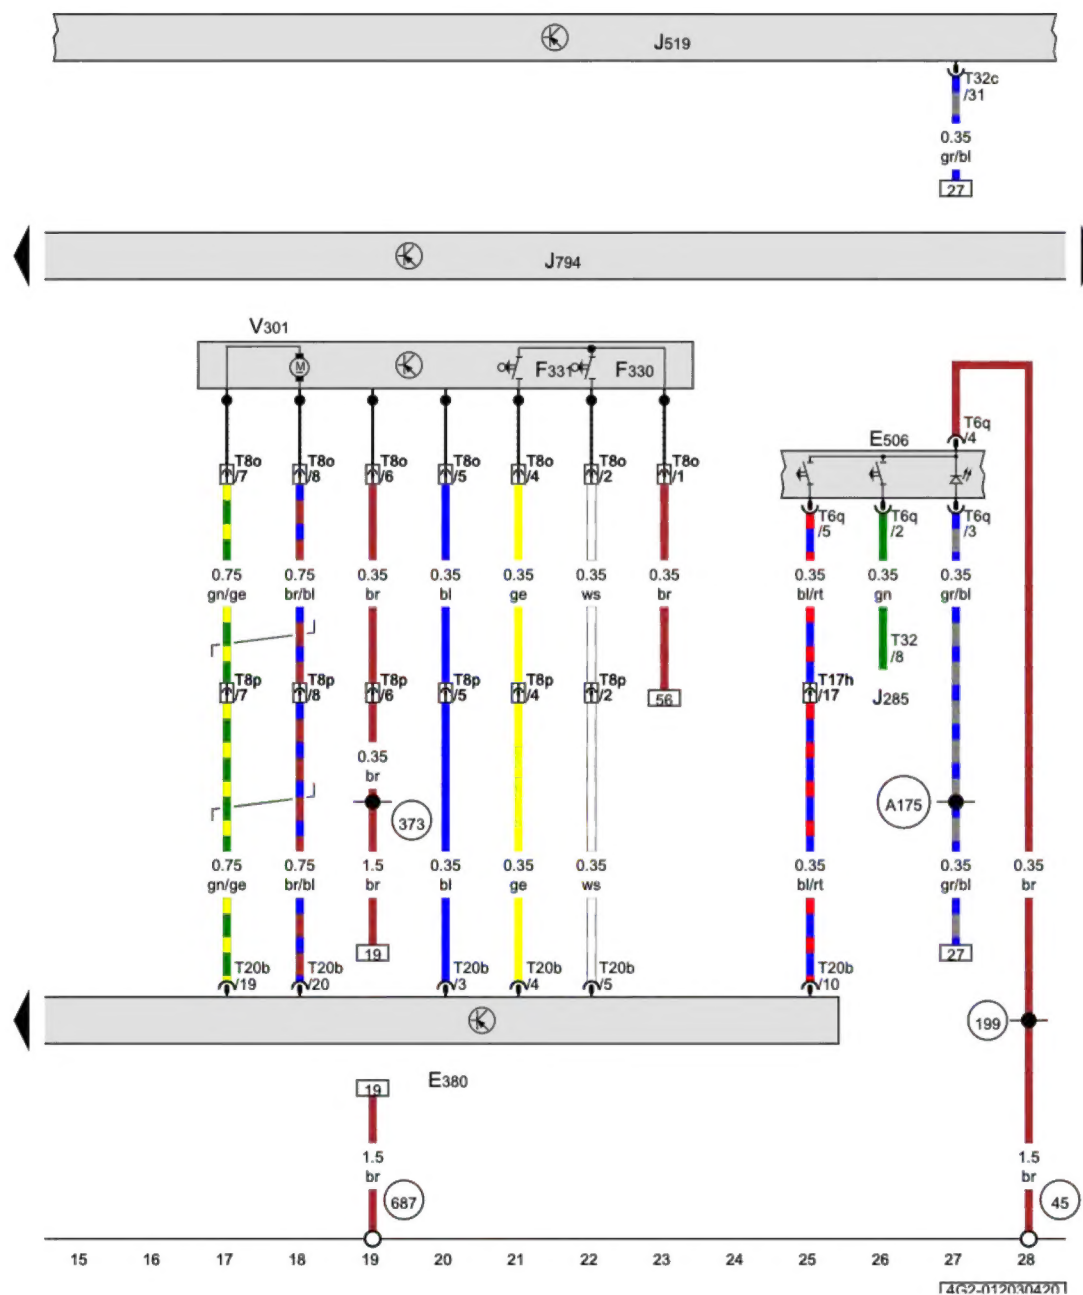

Information Electronics Control Module 1, Microphone Unit in Front Roof Module

- J772 Rearview Camera System Control Module
- J794 Information Electronics Control Module 1
- R140 Left Front Microphone
- R141 Right Front Microphone
- R164 Microphone Unit in Front Roof Module
- T2aw 2-Pin Connector
- T2df 2-Pin Connector
- T6e 6-Pin Connector
- T12c 12-Pin Connector
- * Refer to Applicable Wiring Diagram for Data Bus Networking
- *2 For Vehicles with Rearview Camera System
- *3 Fiber Optic Cable

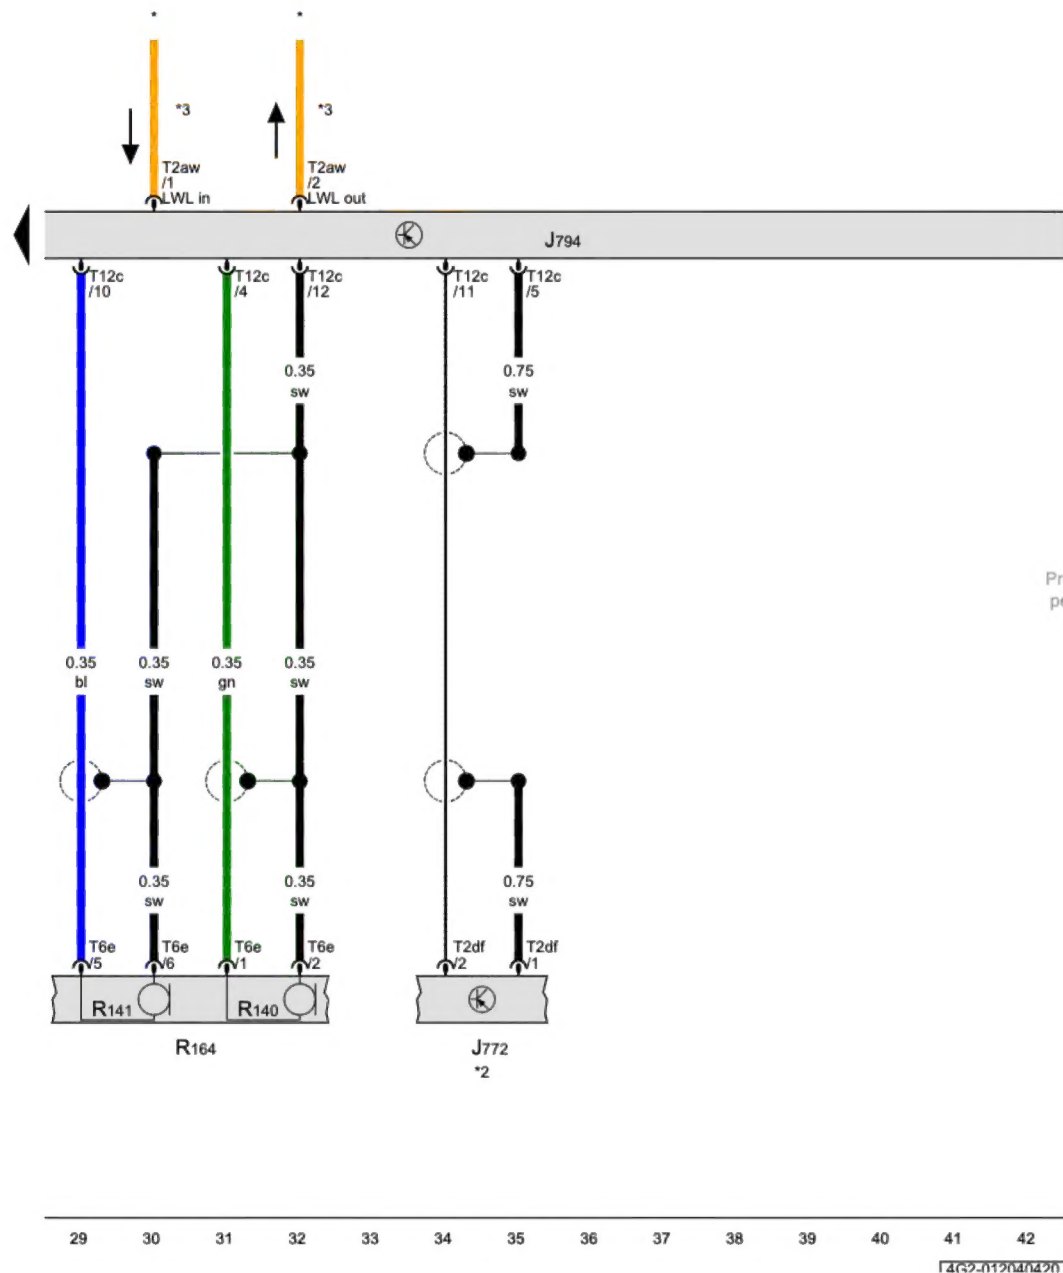


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Front Information Display Control Head, Information Electronics Control Module 1

- J685 Front Information Display Control Head
- J794 Information Electronics Control Module 1
- ST1 Fuse Panel 1
- SC2 Fuse 2 (On Fuse Panel C)
- T4de 4-Pin Connector
- T4df 4-Pin Connector
- T8ag 8-Pin Connector

- 45 Ground Connection Behind Instrument Panel, Center
- 213 Ground Connection (in Instrument Panel Wiring Harness)
- * Refer to Applicable Wiring Diagram for Fuse Positions

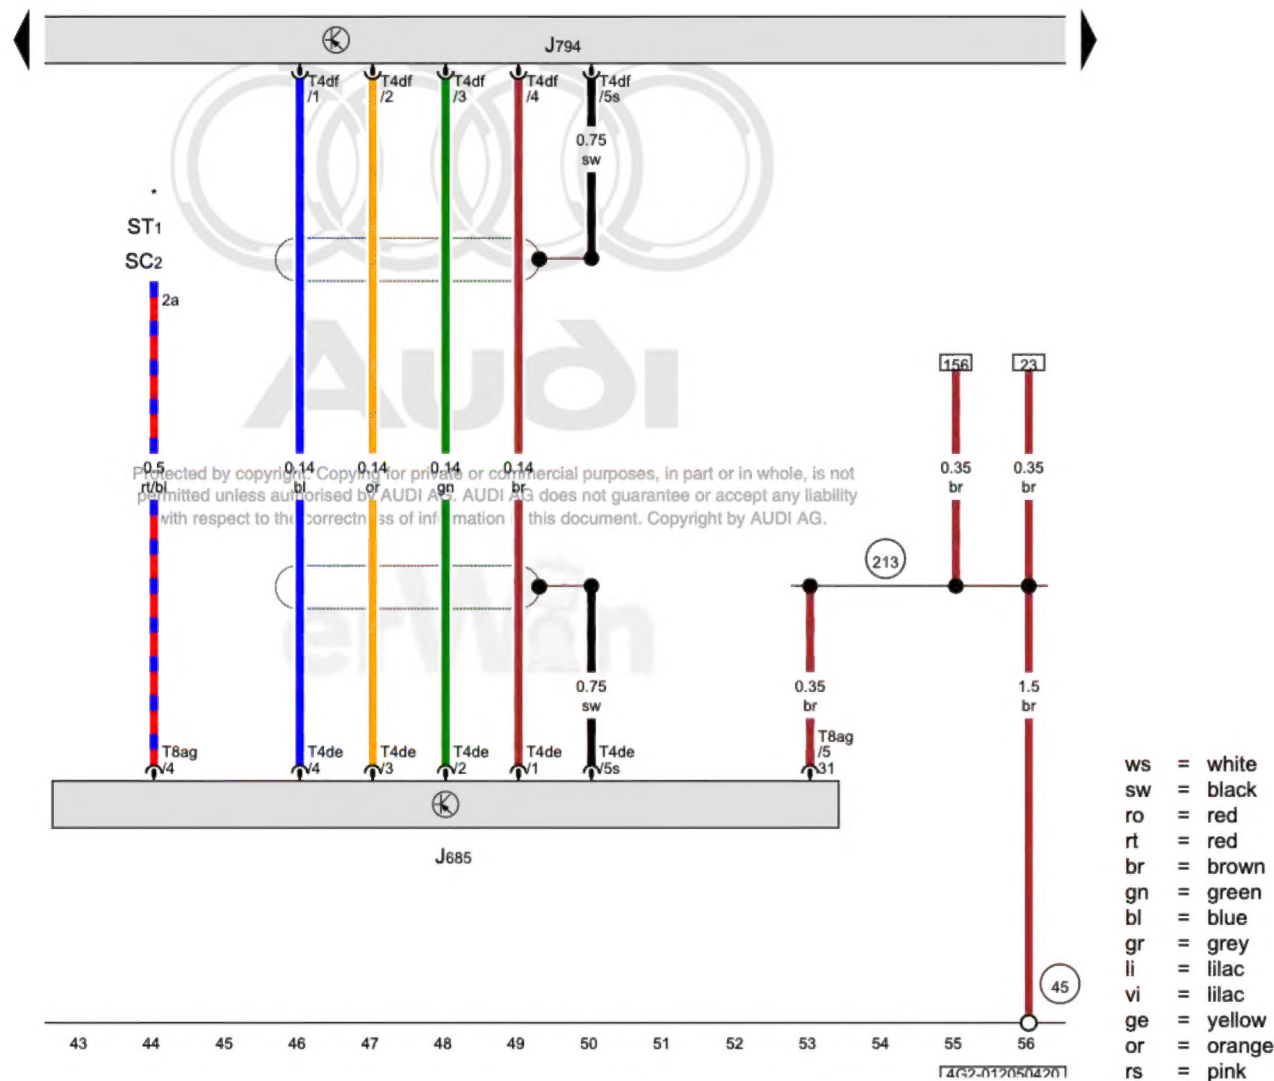


Information Electronics Control Module 1, Antenna Amplifier 3

- J794 Information Electronics Control Module 1
- R50 GPS Antenna
- R65 Telephone Antenna
- R112 Antenna Amplifier 3
- R170 Satellite Antenna
- R183 Digital Radio Antenna
- R216 Roof Antenna
- T2au 2-Pin Connector
- T2av 2-Pin Connector
- T2ax 2-Pin Connector
- T2bt 2-Pin Connector
- T2cg 2-Pin Connector
- T2ch 2-Pin Connector
- T2ck 2-Pin Connector

653 Ground Connection on Left D-Pillar

- * For Vehicles with Cell Phone Preparation
- *2 For USA Only

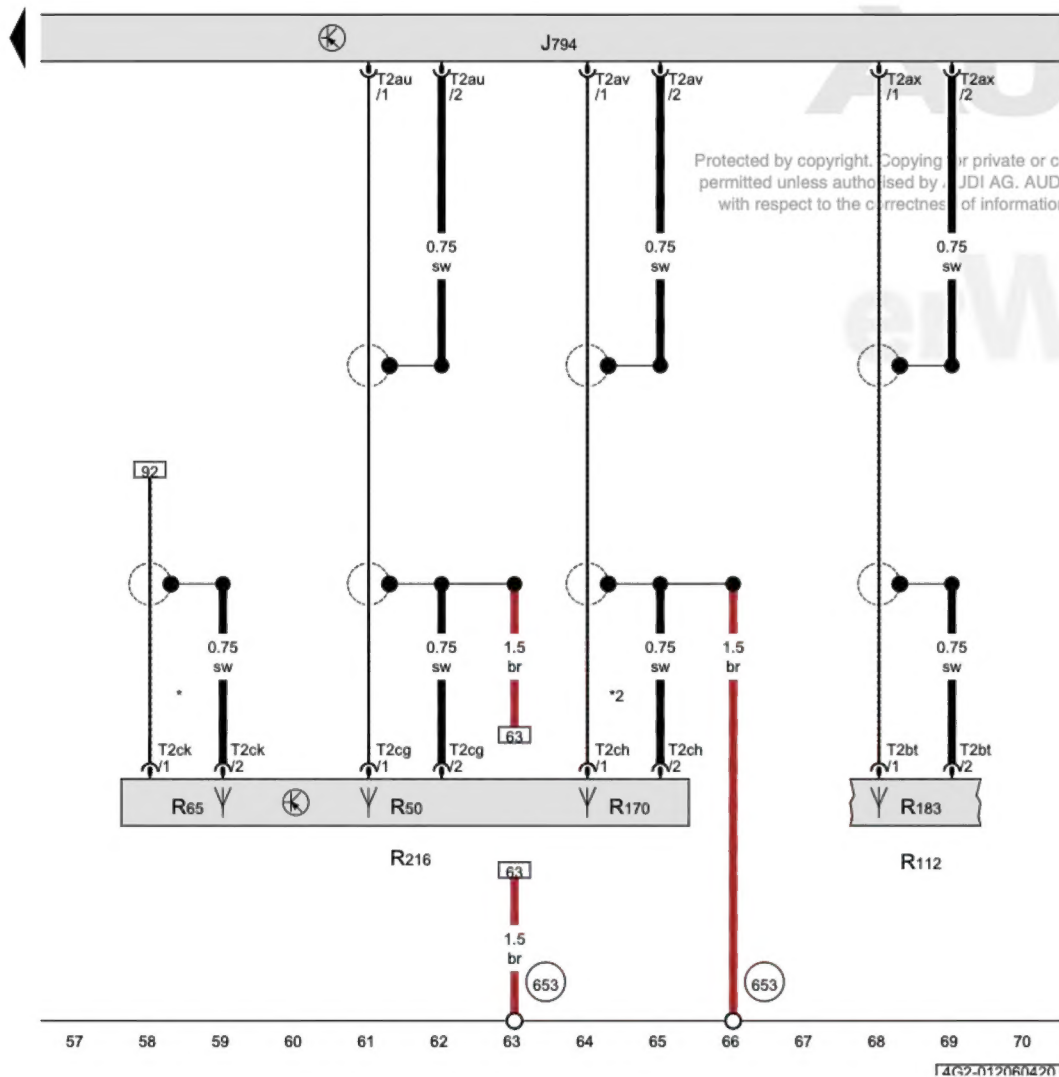

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink




Information Electronics Control Module 1, Antenna Amplifier, Antenna Amplifier 2, Telephone Baseplate

- J794 Information Electronics Control Module 1
- R11 Antenna
- R24 Antenna Amplifier
- R93 Radio Antenna 2
- R111 Antenna Amplifier 2
- R126 Telephone Baseplate
- R152 Bluetooth Antenna
- ST2 Fuse Panel 2
- SF10 Fuse 10 (On Fuse Panel F)
- T2ar 2-Pin Connector
- T2bw 2-Pin Connector
- T4ab 4-Pin Connector
- T4aq 4-Pin Connector
- T4y 4-Pin Connector, Near the Telephone Baseplate
- T5l 5-Pin Connector
- T12c 12-Pin Connector
- T12d 12-Pin Connector

B478 Connection 14 (in Main Wiring Harness)

- * Refer to Applicable Wiring Diagram for Fuse Positions
- *2 For Vehicles with Bluetooth Antenna
- *3 From June 2011

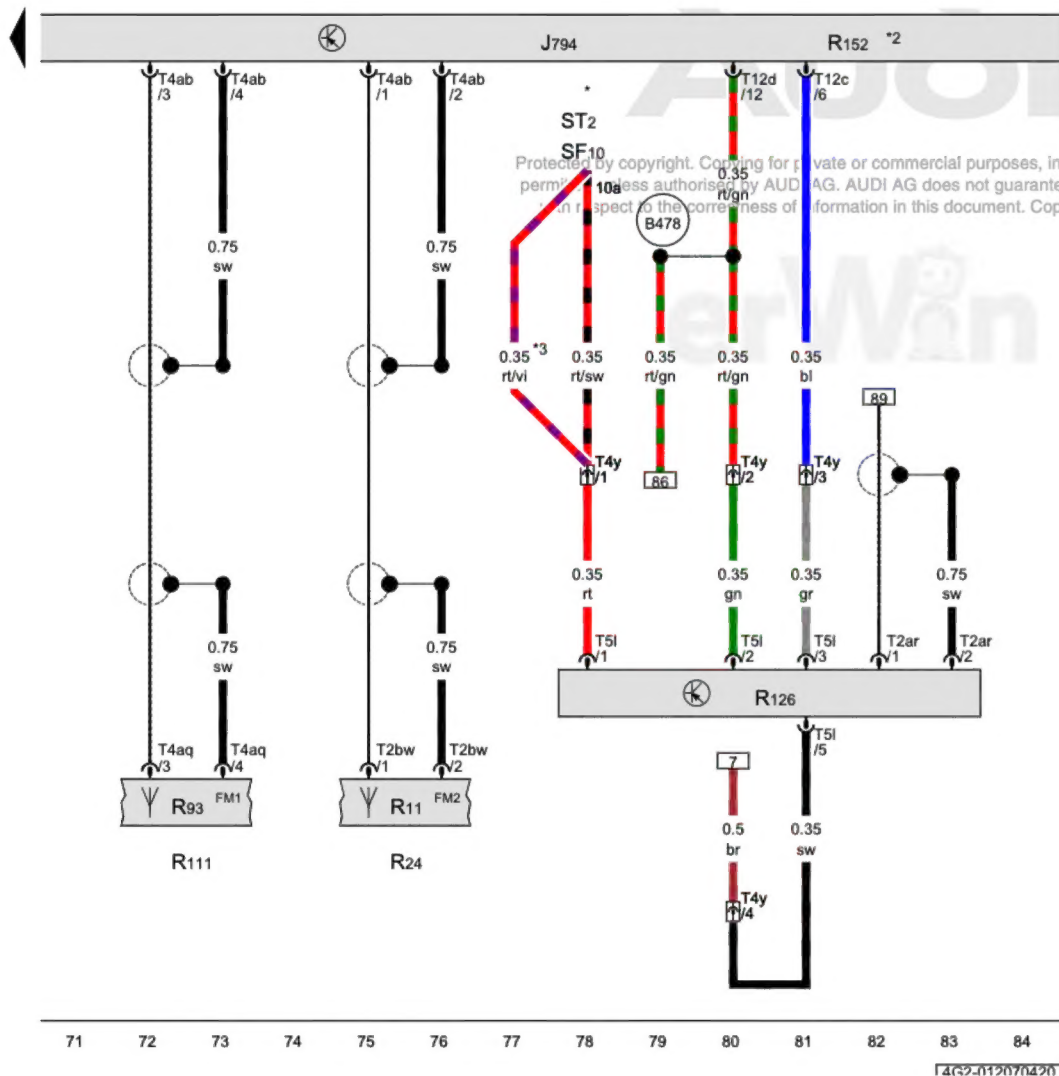

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink


Information Electronics Control Module 1, Cellular Telephone Amplifier

- J794 Information Electronics Control Module 1
- R86 Cellular Telephone Amplifier
- ST2 Fuse Panel 2
- SF10 Fuse 10 (On Fuse Panel F)
- T2dc 2-Pin Connector
- T2dd 2-Pin Connector
- T4az 4-Pin Connector

- 51 Ground Connection in Luggage Compartment, Right
- 383 Ground Connection 18 (in Main Wiring Harness)
- 386 Ground Connection 21 (in Main Wiring Harness)
- 389 Ground Connection 24 (in Main Wiring Harness)

- * Not for USA
- *2 Refer to Applicable Wiring Diagram for Fuse Positions
- *3 Avant
- *4 From June 2011

Protected by copyright. Copying for private use is permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

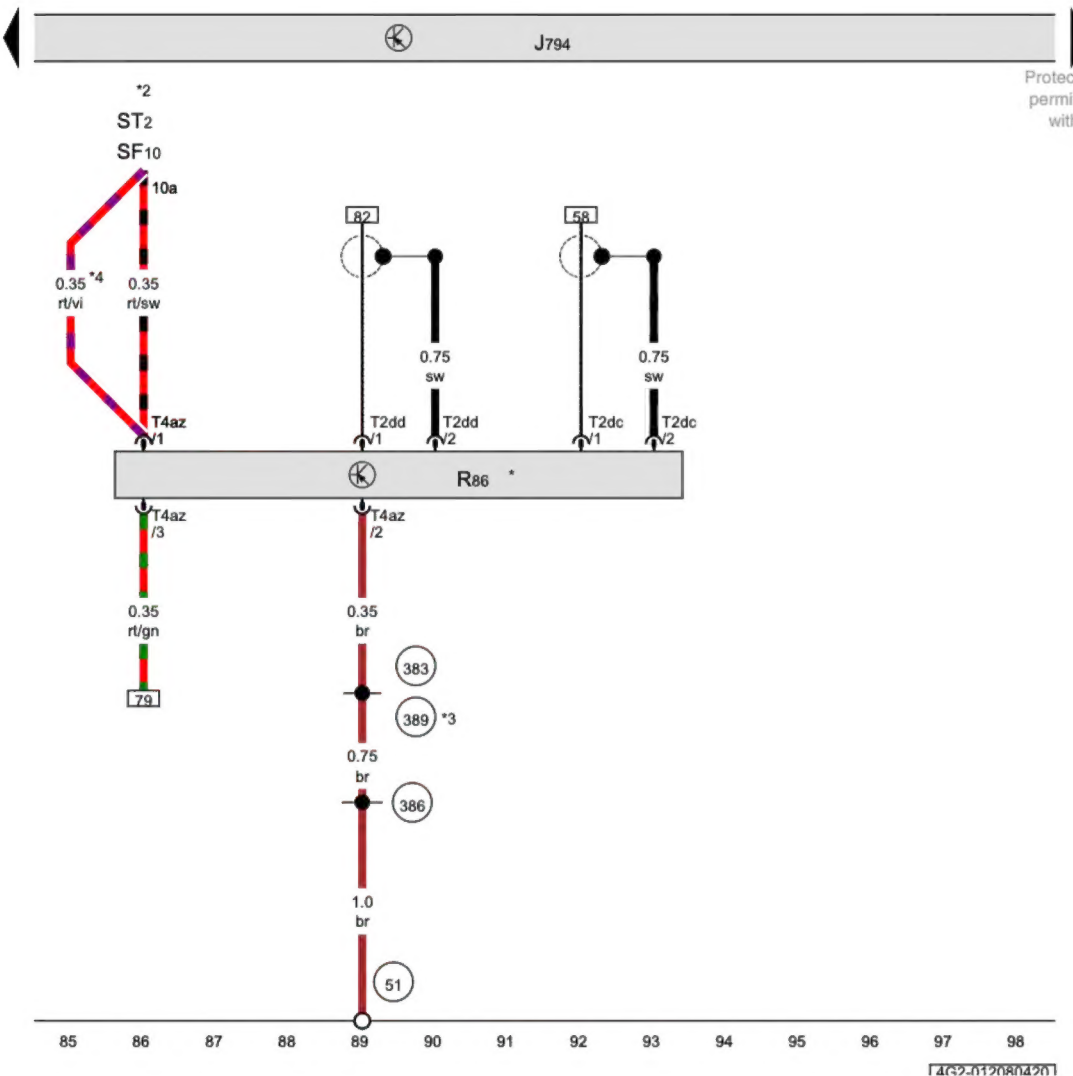

Information Electronics Control Module 1, Left Front Treble Speaker, Right Front Treble Speaker, Left Front Mid-Bass Speaker, Right Front Mid-Bass Speaker, Center Speaker

J794 Information Electronics Control Module 1

R20 Left Front Treble Speaker

R22 Right Front Treble Speaker

R101 Left Front Mid-Bass Speaker

R102 Right Front Mid-Bass Speaker

R208 Center Speaker

T2gs 2-Pin Connector

T2gu 2-Pin Connector

T2gw 2-Pin Connector

T2gx 2-Pin Connector

T2gy 2-Pin Connector

T8e 8-Pin Connector

T8f 8-Pin Connector

T17i 17-Pin Connector, In the Left A-Pillar Connector Station

T23a 23-Pin Connector, On the Left A-Pillar

T23b 23-Pin Connector, On the Right A-Pillar

T27a 27-Pin Connector, On the Left A-Pillar

T27b 27-Pin Connector, On the Right A-Pillar


B101 Left Front Speaker Positive Connection (in Main Wiring Harness)

B102 Left Front Speaker Negative Connection (in Main Wiring Harness)

B103 Right Front Speaker Positive Connection (in Main Wiring Harness)

B104 Right Front Speaker Negative Connection (in Main Wiring Harness)


* From June 2011

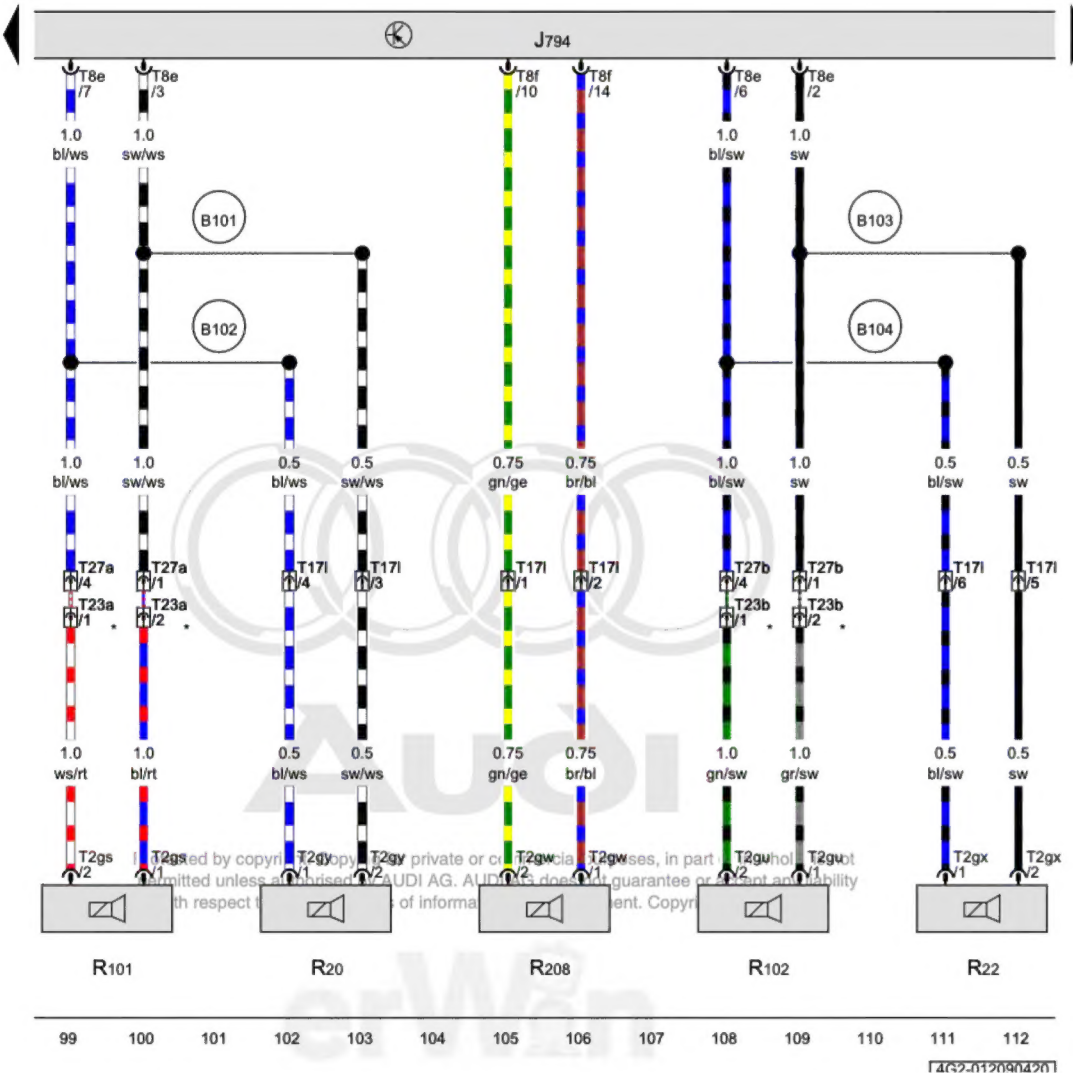

Information Electronics Control Module 1, Left Rear Treble Speaker, Right Rear Treble Speaker, Left Rear Mid-Bass Speaker, Right Rear Mid-Bass Speaker, Subwoofer

- J794 Information Electronics Control Module 1
- R14 Left Rear Treble Speaker
- R16 Right Rear Treble Speaker
- R159 Left Rear Mid-Bass Speaker
- R160 Right Rear Mid-Bass Speaker
- R211 Subwoofer
- T2go 2-Pin Connector
- T2gv 2-Pin Connector
- T2gz 2-Pin Connector
- T2ha 2-Pin Connector
- T2hb 2-Pin Connector
- T8e 8-Pin Connector
- T8f 8-Pin Connector
- T27c 27-Pin Connector, On the Left B-Pillar
- T27d 27-Pin Connector, On the Right B-Pillar


- R71 Speaker Positive Connection (in Left Rear Door Wiring Harness)
- R72 Speaker Negative Connection (in Left Rear Door Wiring Harness)
- R73 Speaker Positive Connection (in Right Rear Door Wiring Harness)
- R74 Speaker Negative Connection (in Right Rear Door Wiring Harness)

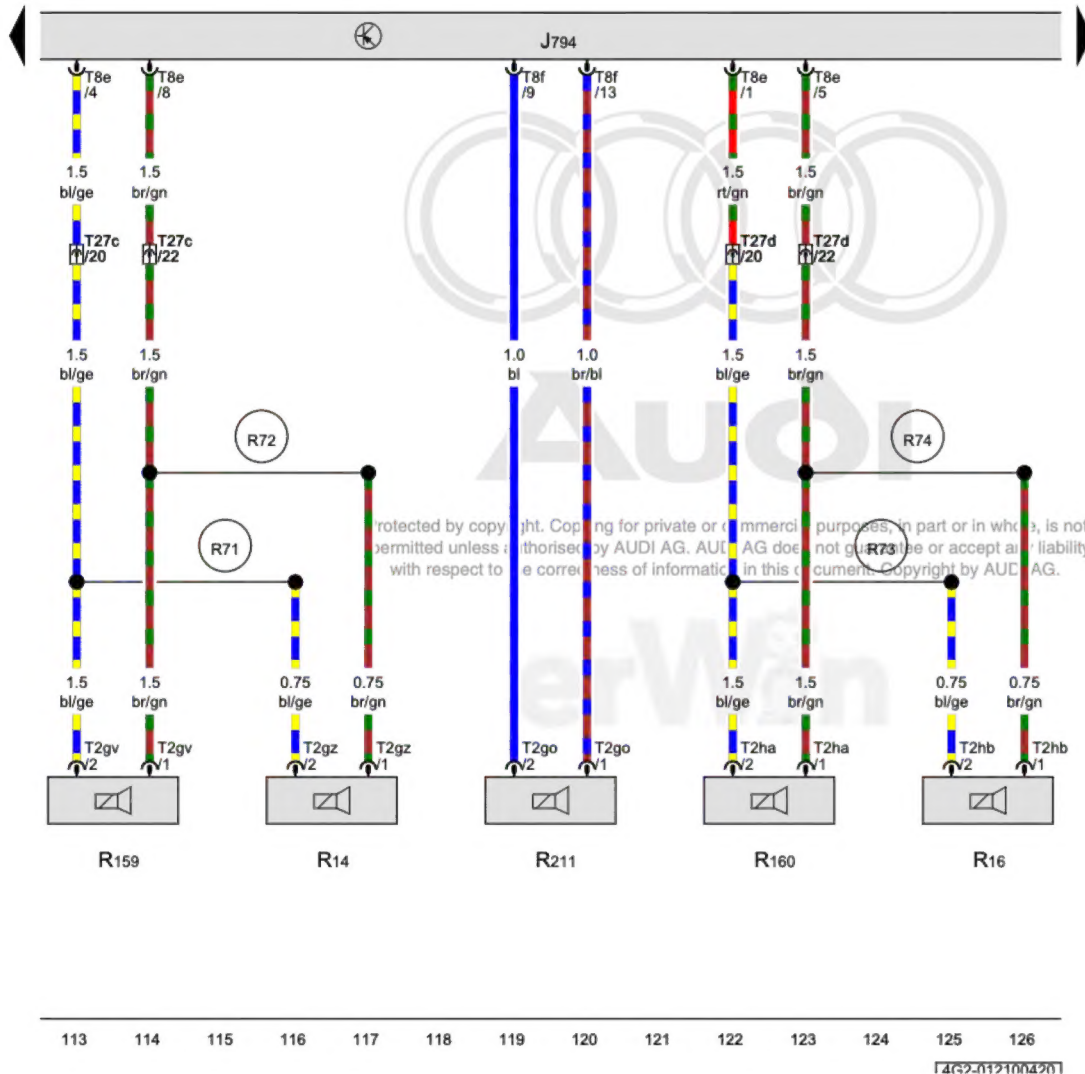

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Information Electronics Control Module 1, External Audio Source Connection

- J794 Information Electronics Control Module 1
- R199 External Audio Source Connection
- T12e 12-Pin Connector
- T30b 30-Pin Connector
- * For Vehicles with External Audio Source Connection - Audi Music Interface
- *2 Running Change

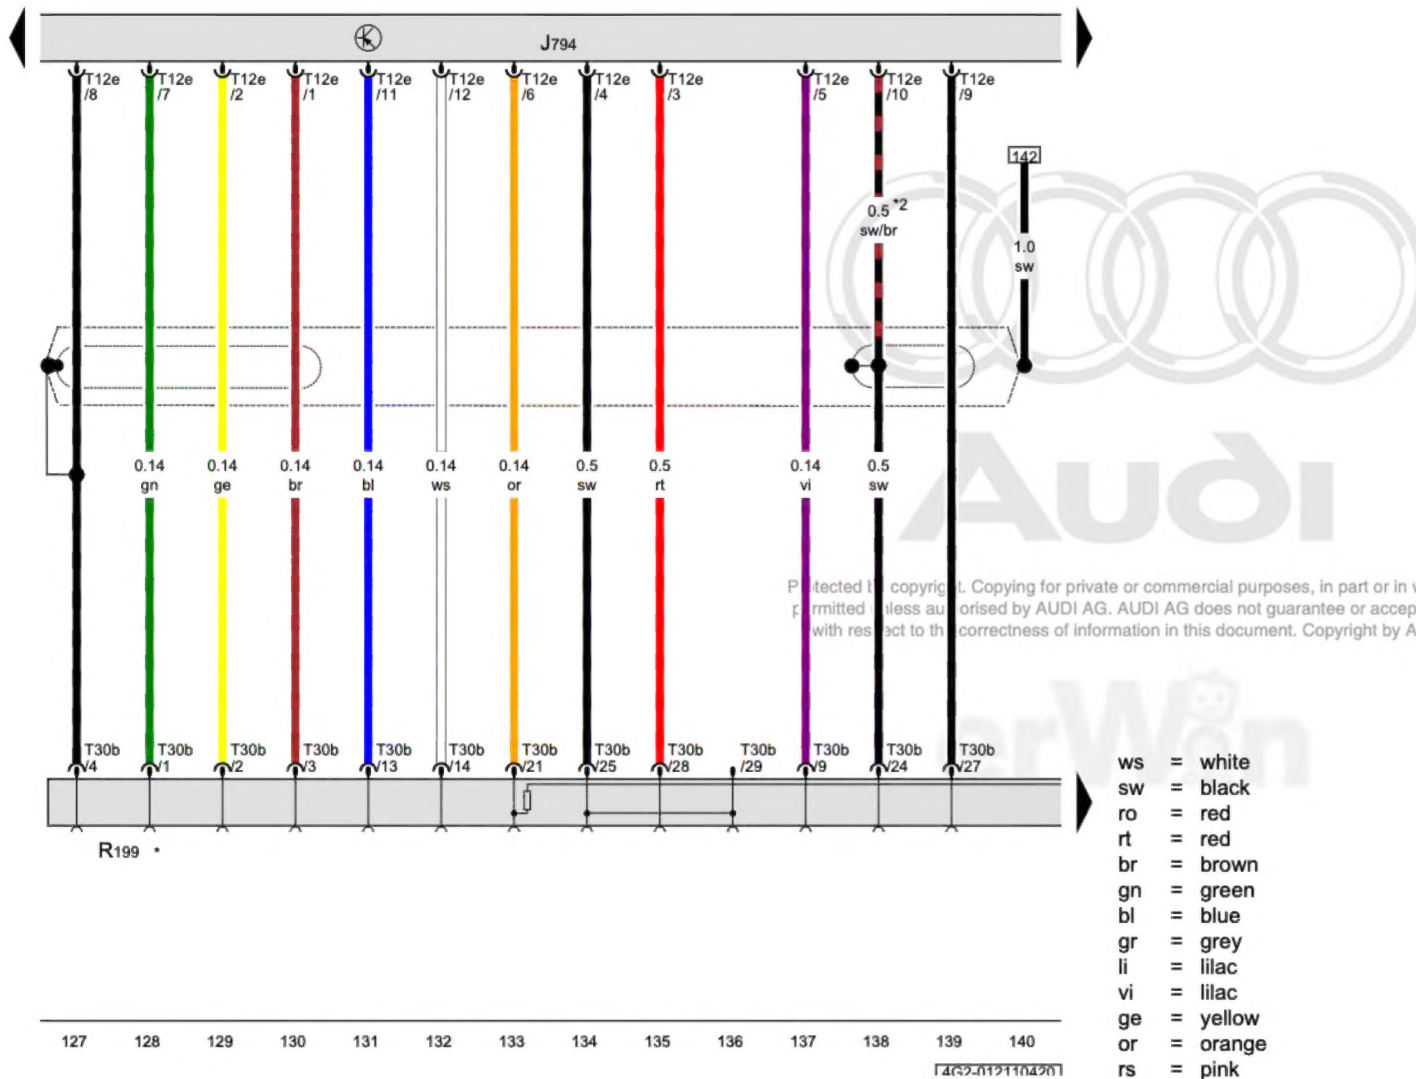


Information Electronics Control Module 1, External Audio Source Connection

- J794 Information Electronics Control Module 1
- R199 External Audio Source Connection
- T4ex 4-Pin Connector
- T4ey 4-Pin Connector, In the Center Console
- T4z 4-Pin Connector
- T12e 12-Pin Connector
- T30b 30-Pin Connector
- * For Vehicles with External Audio Source Connection - AUX-IN Connection
- *2 Ground via Connector Housing

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

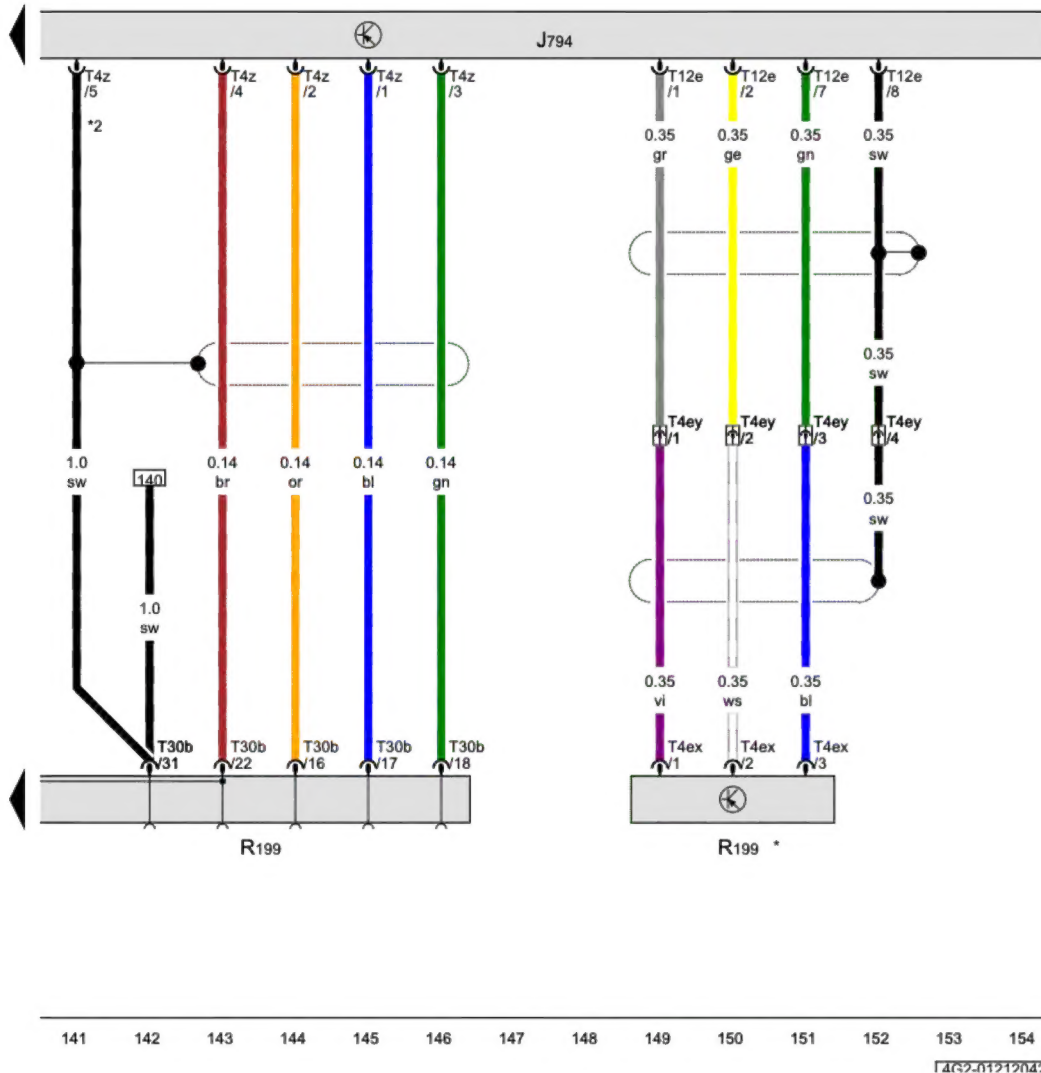


CD Changer

- J285 Instrument Cluster Control Module
- R41 CD Changer
- ST1 Fuse Panel 1
- SC3 Fuse 3 (On Fuse Panel C)
- T2qs 2-Pin Connector
- T8q 8-Pin Connector
- T17g 17-Pin Connector, In the Left A-Pillar Connector Station
- T32 32-Pin Connector

B159 Diagnostic Connection (in Interior Wiring Harness)

- * For Vehicles with CD Changer
- *2 Refer to Applicable Wiring Diagram for Fuse Positions
- *3 Refer to Applicable Wiring Diagram for Data Bus Networking
- *4 Fiber Optic Cable

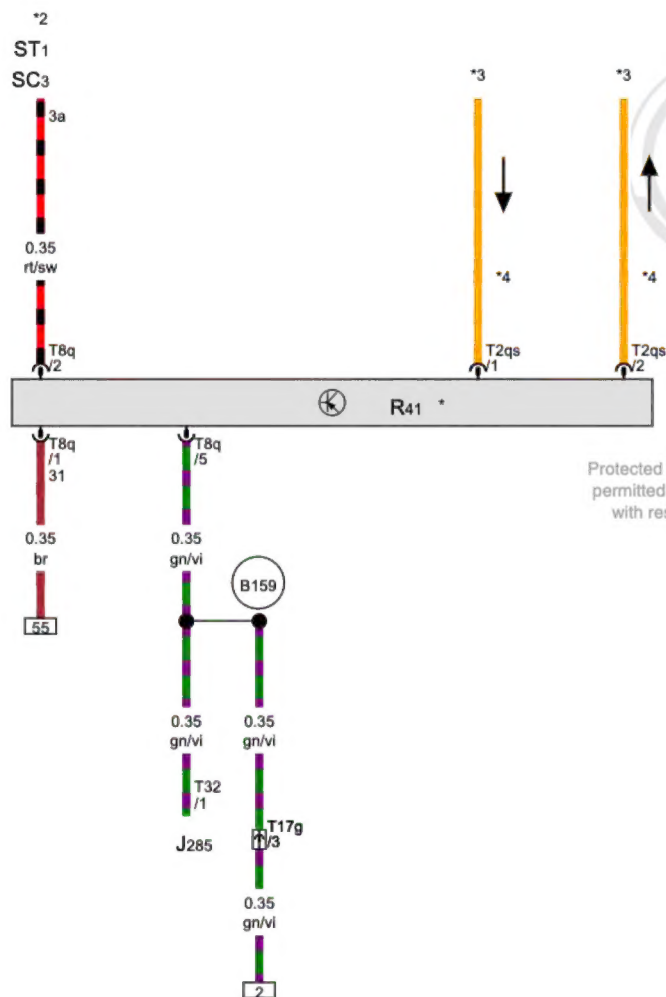

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink